


GOLD SERIES TECHNOLOGY OVERVIEW

The GTx116 transmitter can process up to 16 individual sensing nodes and requires 24 VAC to provide airflow and temperature measurement outputs. Models are available with outputs for analog (GTA116), ethernet (GTE116), RS-485 (GTN116) and LonWorks (GTL116) BAS networks. The transmitter is independent of the sensor probes thus eliminating field matching. The transmitter includes a 16 character LCD display that indicates airflow, temperature and system status, and is also useful during configuration and diagnostic modes. Field configuration and diagnostics are accomplished through a simple push-button interface on the main circuit board for selection of units of measure, display units, output scaling, dampening filter, diagnostics and instrument status. Individual sensor airflow and temperature measurements can be displayed and are beneficial as an

HVAC system diagnostic tool. The airflow output signal can be filtered and a process low limit can be set to force the transmitter output to zero when airflow falls below a user defined value. Both features are important for outside air intake applications that can be affected by transient wind gusts at low airflow rates. In addition, an airflow offset and a gain adjustment feature can be engaged for installations where field calibration or adjustment is necessary. **EBTRON's** GP1 sensor probes with proprietary flow loss compensation design are available in finishes of gold anodized aluminum (standard) or stainless steel (optional). Internal and Insertion duct mounting options are available, as well as an adjustable standoff mount for a wide range of damper applications.

PROBE MOUNTING STYLES AND BRACKET DIMENSIONS

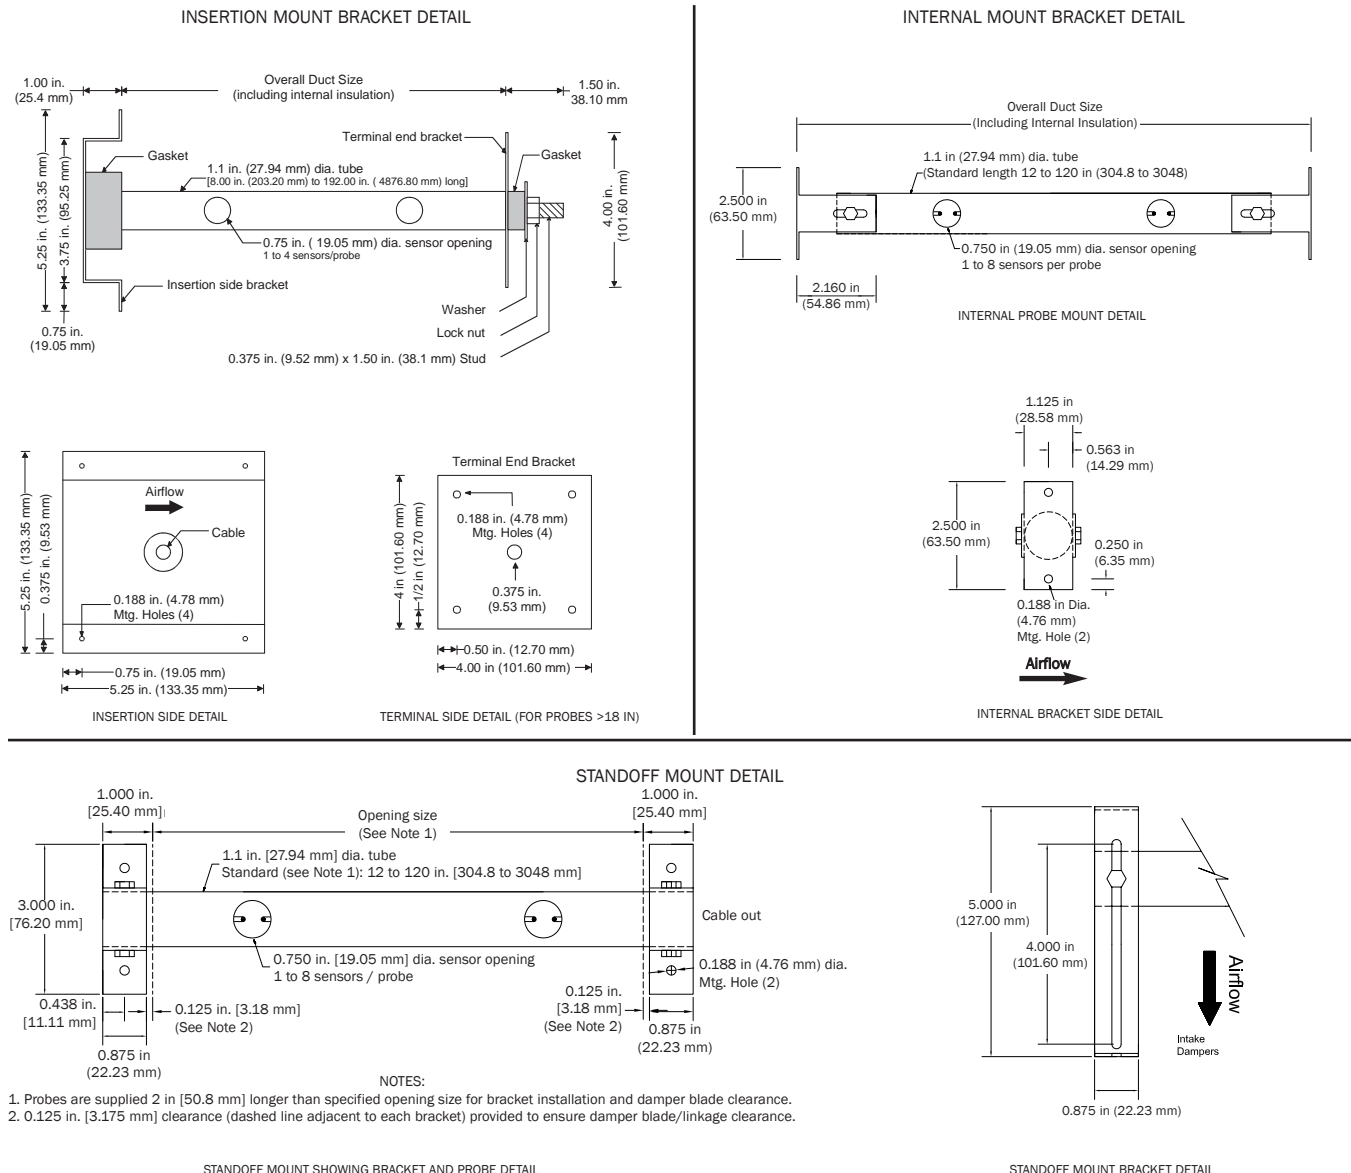

TS_GTN116PA_R1A

'A' SENSOR DENSITY TABLES

EBTRON 'A' sensor density has been designed for economy applications as a competitive upgrade to averaging pitot arrays. Performance will exceed that of pitot arrays with respect to averaging and turn down when placed in similar locations. To maximize installed performance and accuracy, always follow minimum placement guidelines. The following tables indicate the quantity of probes and number of sensing nodes per probe provided for common rectangular and round/round-oval applications with probes from 12 to 120 inches.

GP1 'A' Sensor Density Tables

Rectangular Probe Sensor Density (# Probes / # Sensors per Probe)
GTx116-PA


		PROBE LENGTH - RECTANGULAR DUCTS															
		12	18	24	30	36	42	48	54	60	66	72	84	96	108	120	
ADJACENT SIDE LENGTH	C	12	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/3	1/3	1/3
	18	2/1	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/3	1/3	1/3	1/3	1/4	1/4	1/4
	B	24	2/1	2/1	1/2	1/2	1/2	1/2	1/3	1/3	1/3	1/3	1/4	1/4	1/6	1/6	1/6
	30	2/1	2/1	2/1	1/2	1/2	1/3	1/3	1/3	1/4	1/4	1/4	1/6	1/6	1/6	1/6	1/6
	36	2/1	2/1	2/1	2/1	2/2	2/2	2/2	2/2	2/2	2/2	2/3	2/3	2/3	2/3	1/6	1/6
	42	3/1	2/1	2/1	2/2	2/2	2/2	2/2	2/2	2/2	2/3	2/3	2/3	2/3	2/3	2/3	2/4
	48	3/1	2/1	2/2	2/2	2/2	2/2	2/3	2/3	2/3	2/3	2/3	2/3	2/3	2/4	2/4	2/4
	54	3/1	2/1	3/1	2/2	2/2	2/2	3/2	2/3	2/3	2/3	2/3	2/3	2/3	2/4	2/4	2/4
	60	3/1	3/1	3/1	3/1	3/1	3/2	3/2	3/2	3/2	2/3	2/3	2/3	2/4	2/4	2/4	2/4
	66	3/1	3/1	3/1	3/1	3/2	3/2	3/2	3/2	3/2	3/2	2/3	3/3	3/3	2/4	2/4	2/4
	72	3/1	3/1	3/1	3/1	3/2	3/2	3/2	3/2	3/2	3/2	3/3	3/3	3/3	2/4	2/4	2/4
	84	4/1	4/1	4/1	4/2	4/2	3/2	3/2	3/2	3/3	3/3	3/3	3/3	3/3	3/3	2/4	2/4
	96	4/1	4/1	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	3/3	3/3	3/3	3/3	3/3	3/3
	108	4/1	4/1	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	3/3	3/3	3/3	3/3	3/3
	120	4/1	4/1	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	3/3	3/3	3/3	3/3
	B	144	4/1	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	3/3	3/3	3/3
168	4/1	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	3/3	
192	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	4/2	

Round-Oval Probe Sensor Density (# Probes / # Sensors per Probe)
GTx116-PA


		PROBE LENGTH - ROUND-OVAL DUCTS														
		12	18	24	30	36	42	48	54	60	66	72	84	96	108	120
ADJACENT SIDE LENGTH	C	12	1a/2	1a/2	1a/2	1a/2	1a/2	1a/2	1a/2	1a/2	1a/2	1a/2	1a/2	1a/2	1a/3	1a/3
	18		1a/2	1a/2	1a/2	1a/2	1a/2	1a/2	1a/2	1a/2	1a/2	1a/3	1a/3	1a/3	1a/4	1a/4
	B	24			1a/2	1a/2	1a/2	1a/2	1a/3	1a/3	1a/3	1a/3	1a/4	1a/4	1a/6	1a/6
	30				1a/2	1a/2	1a/2	1a/3	1a/3	1a/3	1a/4	1a/4	1a/6	1a/6	1a/6	1a/6
	36					1a/2	1a/3	1a/3	1a/3	1a/4	1a/4	1a/6	1a/6	1a/6	1a/6	1a/6
	42						1a/3	1a/3	1a/4	1a/4	1a/6	1a/6	1a/6	1a/6	1a/6	1a/8
	48							1a/4	1a/4	1a/6	1a/6	1a/6	1a/6	1a/6	1a/8	1a/8
	54								1a/4	1a/6	1a/6	1a/6	1a/6	1a/6	1a/8	1a/8
	60									1a/6	1a/6	1a/6	1a/6	1a/8	1a/8	1a/8
	66										1a/6	1a/6	1a/6	1a/8	1a/8	1a/8
	72											1a/6	1a/8	1a/8	1a/8	1a/8
	84												1a/8	1a/8	1a/8	1a/8
	96													1a/8	1a/8	1a/8
	108														1a/8	1a/8
	120															1a/8

'A' SENSOR DENSITY PLACEMENT GUIDELINES


Duct and Plenum Probe Minimum Placement Guidelines ('A' Density Probes)

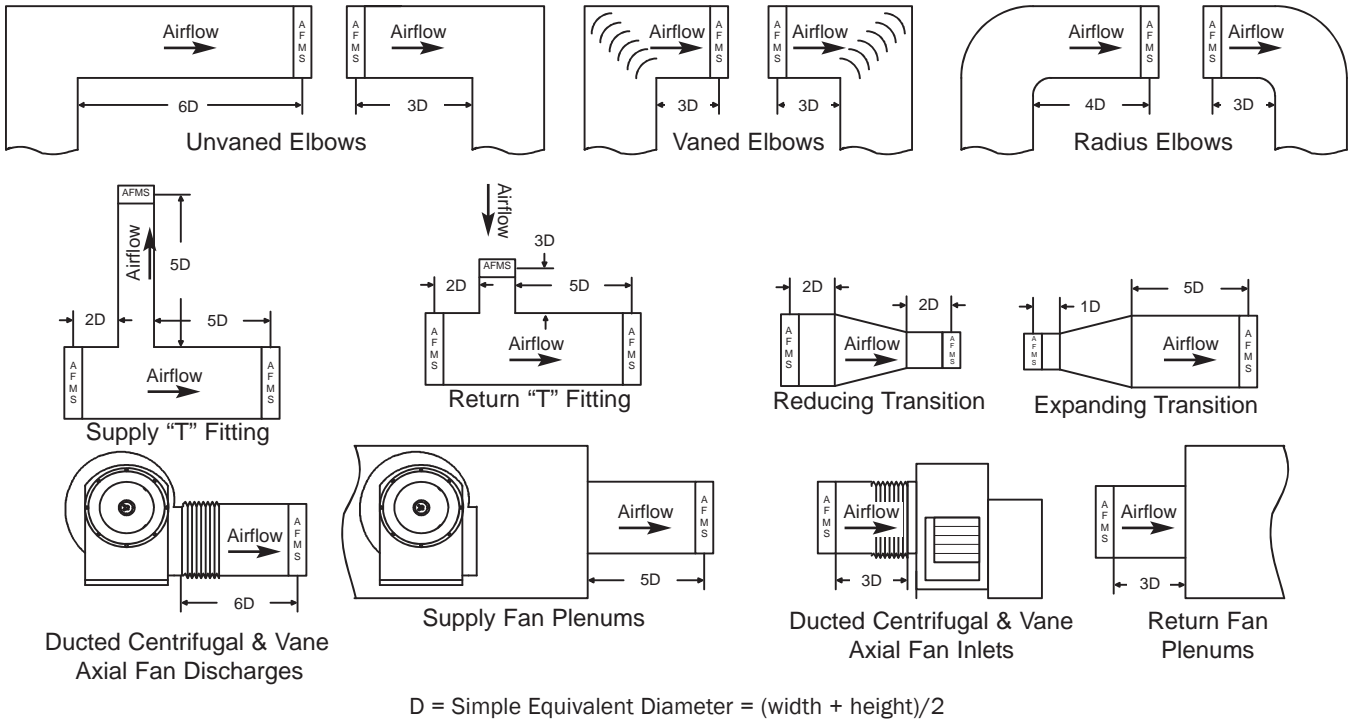

Outside Air Intake Damper/Plenum Application Guidelines

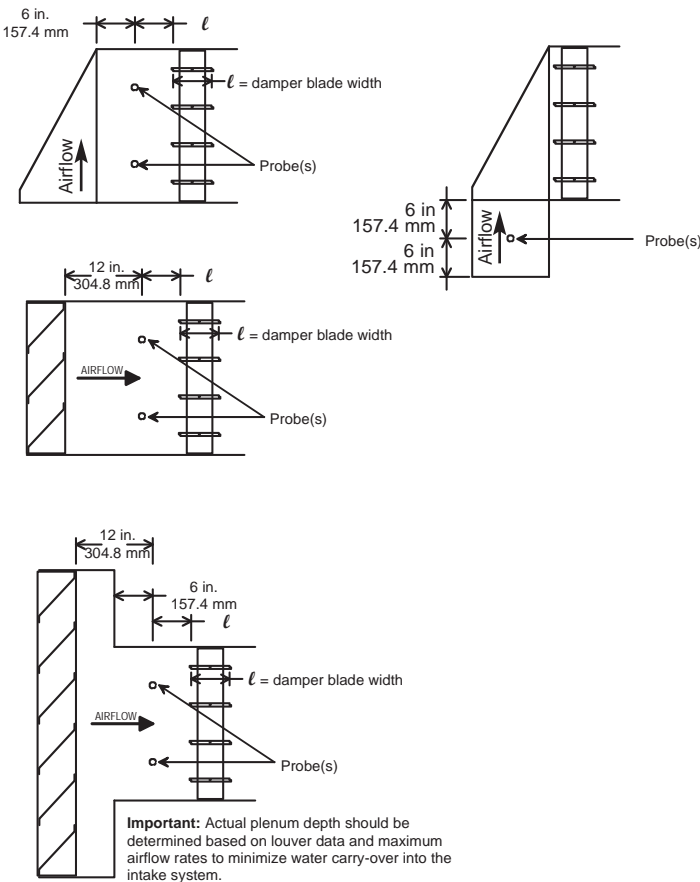

TYPICAL WIRING DIAGRAM

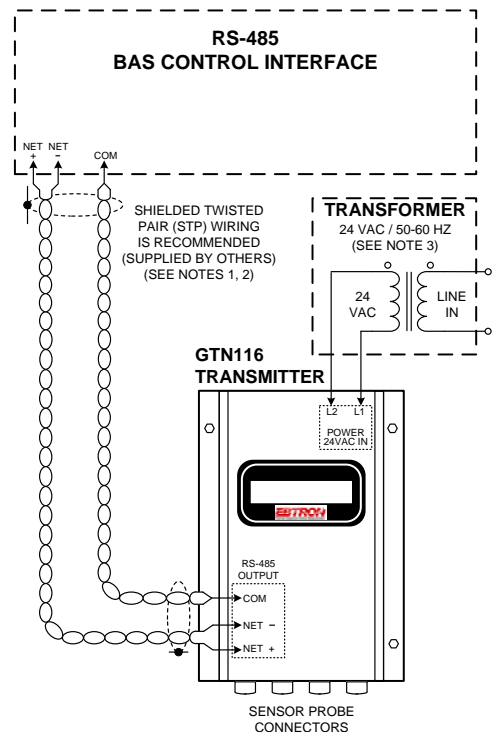

- NOTES:
1. CONNECT OUTPUT SIGNAL CABLE DRAINS TO EARTH GROUND AT ONE END OF EACH CABLE ONLY.
 2. COM CONNECTION MAY BE WIRED USING A SINGLE CONDUCTOR.
 3. ON MULTIPLE GTN116 TRANSMITTER INSTALLATIONS WITH A COMMON 24VAC SOURCE, WIRE 24 VAC POWER IN-PHASE TO THE SAME TERMINALS ON ALL TRANSMITTERS (e.g.: L1 to L1, L2 to L2).

TS_GTN116PA_R1A