



SDX-1000 Application Install

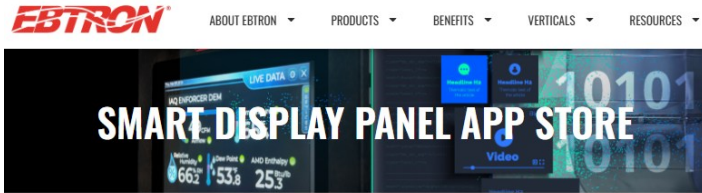

1. Navigate to EBTRON.com/SDPAppStore to access new application releases and updates. Download the pertinent application file(s) and save it to a USB A memory device.




2. Insert the USB A memory device into the open USB thumb drive slot on the SDX-1000.

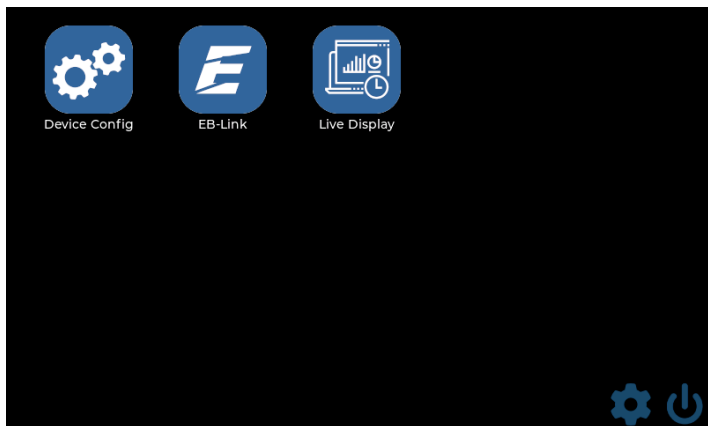


3. To install the application on the SDX-1000, click the settings icon on the lower right hand corner of the SDX-1000.


SDX-1000 Application Install

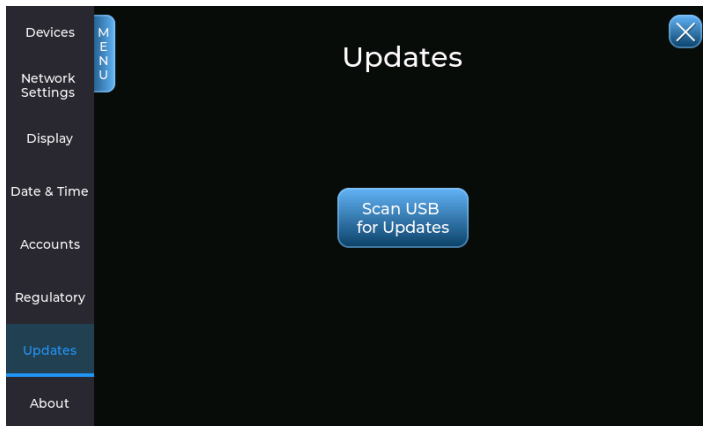

4. Select the Updates Tab on the left menu bar, and then click the “Scan USB for Updates” button. You will be prompted to enter your password. You must have administrative privileges to be able to install and update applications.

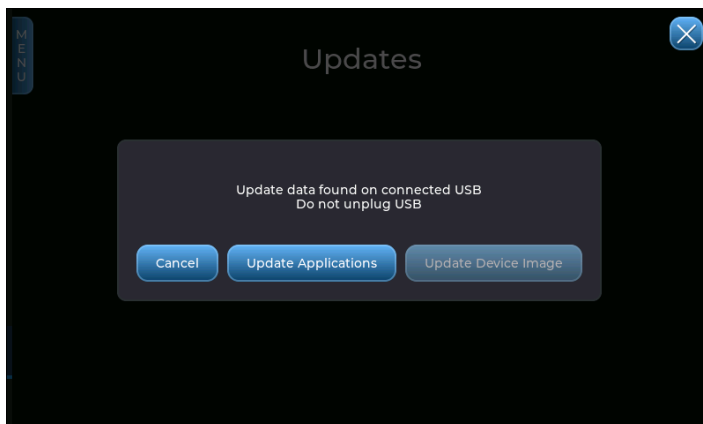


5. Select the “Update Applications” button. All data from the USB drive will then be read in and a list of all available updates, and new apps to install will be shown.

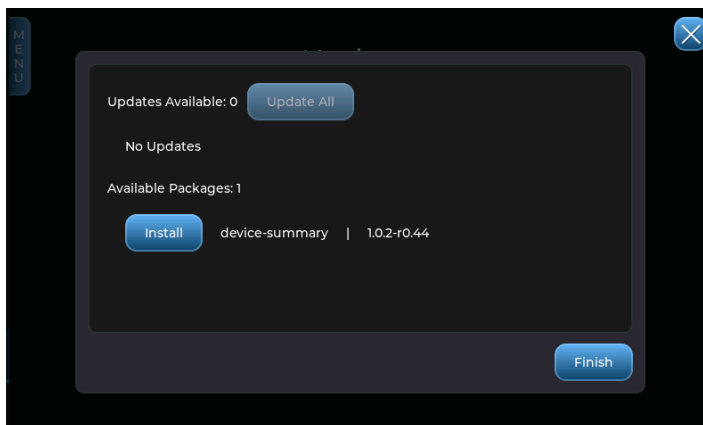


6. Click “Install” next to the application you wish to add. In this example the Device Summary application is being added.

SDX-1000 Application Install

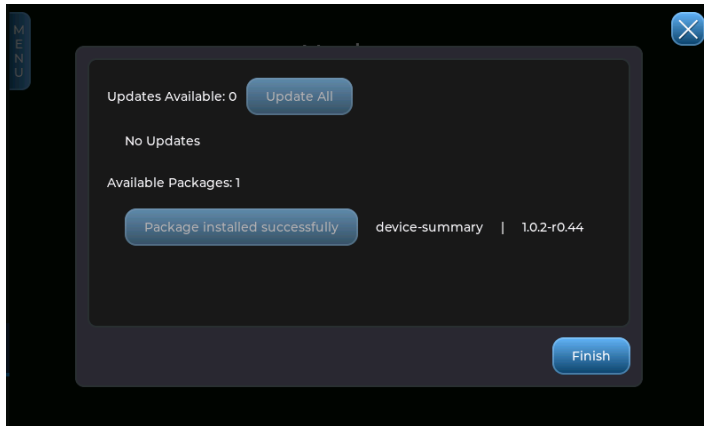

7. After successful completion you should see the “Package installed successfully” message. Click the “Finish” button and follow the prompts to restart the SDX-1000.

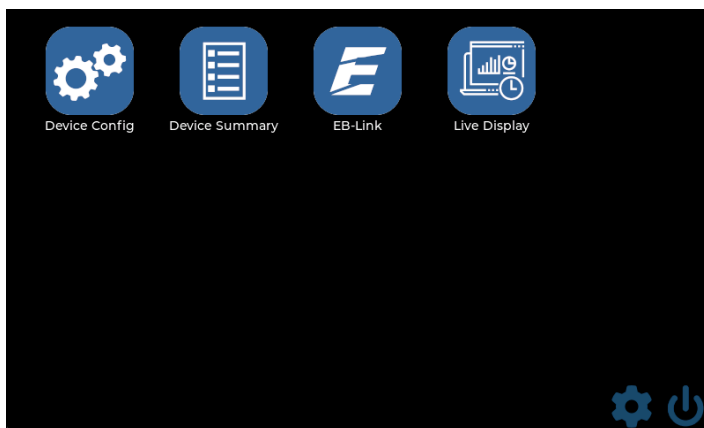

8. The new application is now installed.